


# Arizona Silhouette Duck Call Instructions© 2014

Required Materials: Blank (1 1/2"x1 1/2"x3"), 5/8" drill bit (NM58)  
 STAT Duck Call Kit: BHW 212, 213, 214, 215, 216, 217, 218  
 7mm Pen Mandrel, Sandpaper and finish of your choice  
 Duck Call Tooling Kit - bushing (BHW190)


Drill a 5/8" hole in a blank 1 1/2" x 1 1/2" x 3"

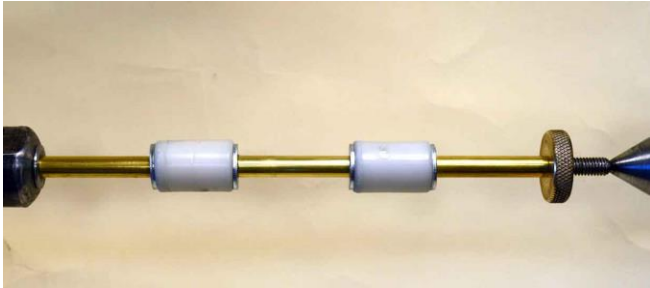

Line up the Duck Call Tooling Kit (BHW 190) on the mandrel as shown -

Use a blank of your choosing 1 1/2" x 1 1/2" x 3" and mount it on the Duck Call Tooling kit.

Turn to shape and sand...

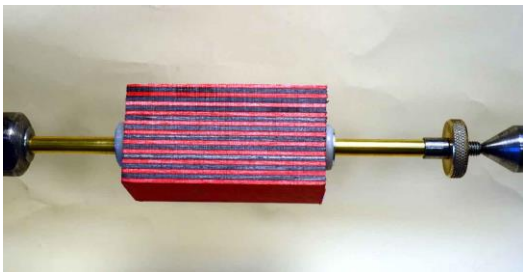

Apply a finish to your duck call, here I use Odie's Oil which is food safe



Assembly of the reeds: Place the long Mylar on the bottom and then put the short reed with the dimple on top. Make sure that the dimple is facing down. Slide both reeds all the way back and then insert the wedge.

Finished duck call -

